

Provisional Class 68 factory fitted sound function sheet.

To keep the number of F keys manageable The halo lights on F15, and they come on in the direction of travel only. Operate by choosing one of the lighting modes by pressing F0, F19 or F20, then turn F15 on as well if halos are required.

- F0 Lights
- F1 Sound on / off (this may be operated in the normal manner)
- F2 Playable high horn
- F3 Playable low horn
- F4 Auto-buffering with Buffer clash (when moving slowly) / Coupling hook (when stationary)
- F5 Brake application (when moving) / Brake dump (when stationary)
- F6 Driver's door slam
- F7 Compressor
- F8 Drive hold (High motor RPM with slow movement)
- F9 Automatic, variable-speed flange squeal
- F10 Despatch whistle
- F11 Guard to driver 'right away' signal
- F12 Roof fan / Cooler group
- F12 TBA
- F13 Sanders
- F14 TBA
- F14 TBA
- F15 Halo Lamps (Directionally selected)
- F16 TBA
- F17 Not used
- F18 Detonators (A speed-dependant 'three bang stop')
- F19 Train mode lighting control: Train at #1 end. No lights at the #1 end at any time. The #2 end has whites when going forward (ie loco leading the set or pulling a train), and reds when in reverse (ie loco propelling the set or setting the stock back)
- F20 Train mode lighting control: Train at No. 2 end
- F21 Light engine / normal mode with halos
- F22 Train mode, train at #1 end with halos
- F23 Train mode, train at #2 end with halos