




# TENSION LOCK UNCOUPLER




The Tension Lock Uncoupler is designed to be fitted under the baseboard of a layout and can uncouple many types of standard couplings without modification. It simply lifts a ramp between the rail when a current is passed through it which falls back into place when turned off.

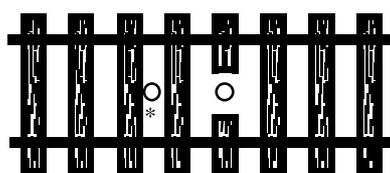


Remove or cut one sleeper as shown, then drill two 3.5mm holes 11mm apart and counter-sink the one marked with \*.

TIP. Drill hole \* first, then measure back 11mm for position of second hole

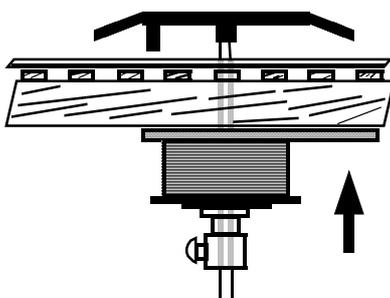

Loosen grub screw and disassemble the unit. Then reassemble in position as shown. Use a screw through hole indicated by arrow for fixing.

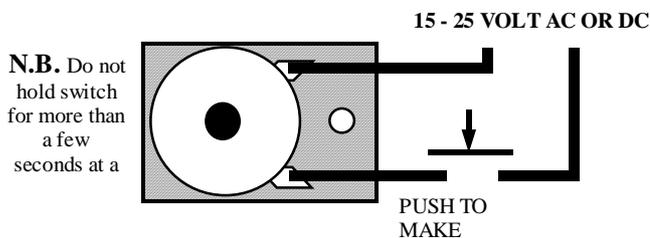

This unit does not require a CDU.

Gaugemaster Controls Plc. Ford Road. Arundel. BN18 0BN.

Tel: 01903 884321. Fax: 01903 884377.

Registered in England. Reg. No. 2714470.